

1. SPARE PARTS

Basic parts

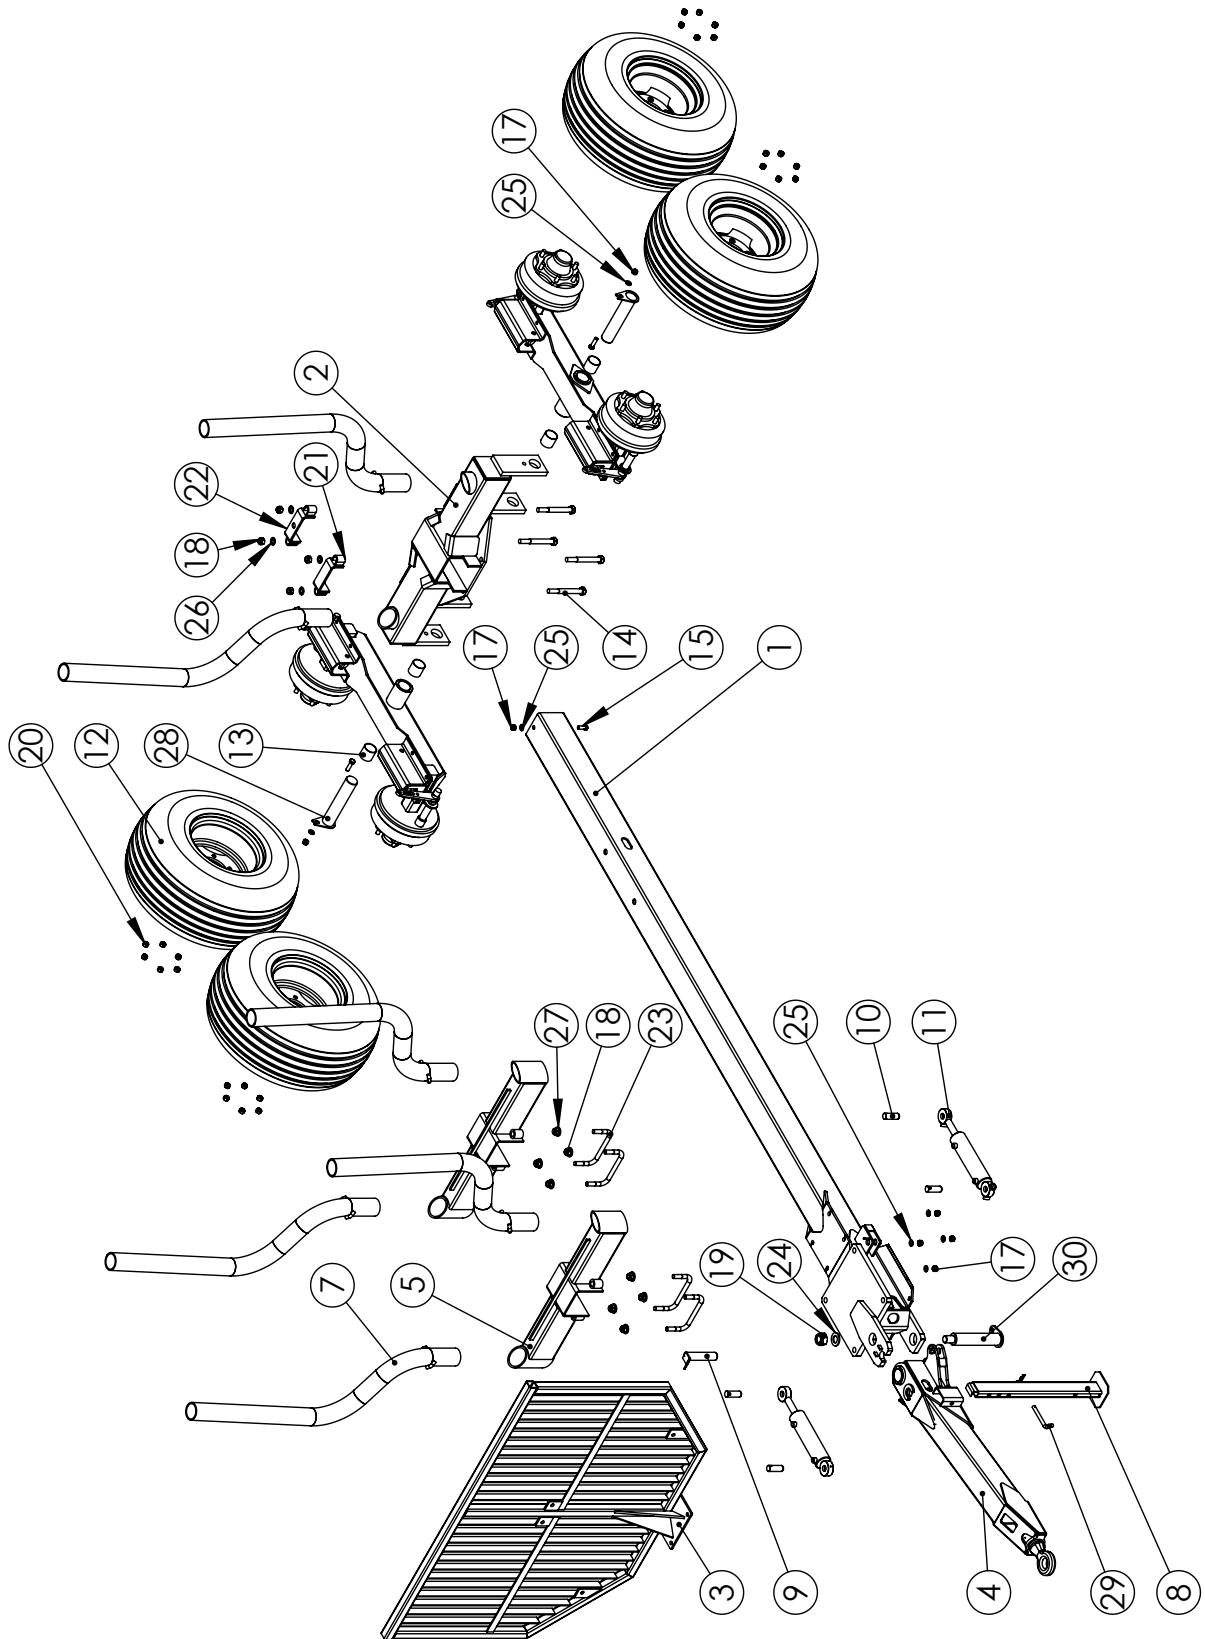


Figure 10. Spare parts of Palms 8S forest trailer

FOREST TRAILER PALMS 8S

Pos	Qty	Part №	Part name
1	1	81.01.00.00	Chassis
2	1	8.03.00.00B	8S boogie bunk
3	1	81.04.00.00	8S front safety barrier
4	1	8S.03.00.00C	8S drawbar
5	2	8S.05.00.00B	8S bunk
6	2	BAL60-70-995.00.00	8S boogie
7	6	8.10.00.00B	8S Bolster
8	1	Park.I.L	Parking leg longer
9	1	tl.00	Drawbar locking pin
10	4	SA-30-89	Drawbar cylinder's shaft
11	2	70-32-200	Drawbar turning cylinder
12	4	wheel	Wheel
13	4	L11FB0926060	Bronze sliding bearing
14	4	M24x200b	Hex head bolt M24 x 200 DIN 931
15	1	M16x40b	Bolt M16 x 40 DIN 933
16	2	M16x55b	Bolt M16 x 55 DIN 933
17	7	M16n	Nut M16 DIN 985
18	12	M20n	Nut M20 DIN 985
19	1	M36n	Nut M36 DIN 985
20	24	M18x1,5wn	Wheel nut M18 x 1,5
21	1	8.07.00.00	8S Clamp
22	1	8.07.00.00P	8S Clamp
23	4	K20-115-225	8S Clamp
24	1	M36w	Washer 36 DIN 125
25	7	M16w	Washer 16 DIN 125
26	4	M20w	Washer 20 DIN 125
27	8	**	Washer
28	2	T-60-315	Shaft of boogie
29	1	tjs.01	Parking leg pin
30	1	TK-60-272	Drawbar shaft

Table 4. *Spare parts list of Palms 8S forest trailer*